

# Запасные части для оборудования для автоматизации Перечень

## По вопросам продаж и поддержки обращайтесь:

|                             |                                 |                                |                          |
|-----------------------------|---------------------------------|--------------------------------|--------------------------|
| Алматы (7273)495-231        | Калининград (4012)72-03-81      | Омск (3812)21-46-40            | Сыктывкар (8212)25-95-17 |
| Ангарск (3955)60-70-56      | Калуга (4842)92-23-67           | Орел (4862)44-53-42            | Тамбов (4752)50-40-97    |
| Архангельск (8182)63-90-72  | Кемерово (3842)65-04-62         | Оренбург (3532)37-68-04        | Тверь (4822)63-31-35     |
| Астрахань (8512)99-46-04    | Киров (8332)68-02-04            | Пенза (8412)22-31-16           | Тольятти (8482)63-91-07  |
| Барнаул (3852)73-04-60      | Коломна (4966)23-41-49          | Петрозаводск (8142)55-98-37    | Томск (3822)98-41-53     |
| Белгород (4722)40-23-64     | Кострома (4942)77-07-48         | Псков (8112)59-10-37           | Тула (4872)33-79-87      |
| Благовещенск (4162)22-76-07 | Краснодар (861)203-40-90        | Пермь (342)205-81-47           | Тюмень (3452)66-21-18    |
| Брянск (4832)59-03-52       | Красноярск (391)204-63-61       | Ростов-на-Дону (863)308-18-15  | Ульяновск (8422)24-23-59 |
| Владивосток (423)249-28-31  | Курск (4712)77-13-04            | Рязань (4912)46-61-64          | Улан-Удэ (3012)59-97-51  |
| Владикавказ (8672)28-90-48  | Курган (3522)50-90-47           | Самара (846)206-03-16          | Уфа (347)229-48-12       |
| Владимир (4922)49-43-18     | Липецк (4742)52-20-81           | Саранск (8342)22-96-24         | Хабаровск (4212)92-98-04 |
| Волгоград (844)278-03-48    | Магнитогорск (3519)55-03-13     | Санкт-Петербург (812)309-46-40 | Чебоксары (8352)28-53-07 |
| Вологда (8172)26-41-59      | Москва (495)268-04-70           | Саратов (845)249-38-78         | Челябинск (351)202-03-61 |
| Воронеж (473)204-51-73      | Мурманск (8152)59-64-93         | Севастополь (8692)22-31-93     | Череповец (8202)49-02-64 |
| Екатеринбург (343)384-55-89 | Набережные Челны (8552)20-53-41 | Симферополь (3652)67-13-56     | Чита (3022)38-34-83      |
| Иваново (4932)77-34-06      | Нижний Новгород (831)429-08-12  | Смоленск (4812)29-41-54        | Якутск (4112)23-90-97    |
| Ижевск (3412)26-03-58       | Новокузнецк (3843)20-46-81      | Сочи (862)225-72-31            | Ярославль (4852)69-52-93 |
| Иркутск (395)279-98-46      | Ноябрьск (3496)41-32-12         | Ставрополь (8652)20-65-13      |                          |
| Казань (843)206-01-48       | Новосибирск (383)227-86-73      | Сургут (3462)77-98-35          |                          |
| Россия +7(495)268-04-70     | Киргизия +996(312)-96-26-47     | Казахстан +7(7172)727-132      |                          |

 
# Extraction Scale



**941234287 Capacitive Proximity Sensor CM30-16 BPP-KW1**



**941238487 Silencer 1/4**

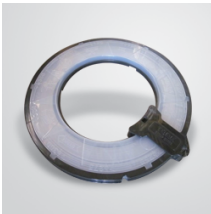

**941243087 Clamp 30 Meter**



**941243187 Clipse**



**941243387 Filter Bottom Sleeve Ø340\*135**



**941243487 Filter Bottom Sleeve Ø435\*135**



**941268087 Cloth Bag Ø630\*120**



**941268387 Cloth Bag Ø490\*120mm**



**941278187 Pneumatic Cylinder FES-1376424 DSBC-32-50-PPVA-N3**



**941278887 Fitting Push-in QS-1/8-6**



**94157987 Wedge AB Type 5\*5\*25**



**94158187 Bearing Enarthrosis Pos 10A**



**94160087 Load Cell 50 kg GS-2A**



**94160187 Load Cell 100 kg GS-2A With Cable**



**94189487 Rubber Coupling Q120\*100**



**94189687 Rubber Coupling Q150\*100**



**94206487 Self-adhesive Sponge Profile (Wick) 25\*3 mm EPDM**



**94226187 Self-adhesive Sponge Profile (Wick) 10\*02 mm EPDM**



**944327987 Pneumatics Cylinder Arm For Top Flap**



**945801087 Single Coil Solenoid Valve FES-575249**



**945802087 Solenoid Coil VACS-C-C1-1 24 Volt FES-8025330**



**945802187 Plug Socket MSSD-EB-M12 FES-539712**



**945830087 FES-529156 Filter Regulator MS4-LFR-1/4-D7-ERM-AS**



**945830887 Pneumatic Cylinder FES-1376427 DSBC-32-125-PPVA-N3**



**945830987 Manifold FES-576418 VABM-B10-20S-G14-3**



**945831387 Manifold FES-576417 VABM-B10-20S-G14-2**



**945840287 Duplex Valve terminals 1/4 VABM Montage**



**9461187 Power Supply 2.5A 24V DC S8VK-C06024**



**9477587 Fitting Push-in Q6-1/4**



**9478187 Push-in L-fitting Q 6-1/8**



**9479087 Fes-525747 Hose Q6x1 Festo**



**9491195287 Load Cell inlet Module Fbs-1Lc Fatek**



**9491229887 Plc Unite Fbs-20Mat2 -Ac Fatek**



 
**9491405387 Control Panel X2 Base 5-F2 Beijer**



**9491455687 Three Position Switch 24V M22-WRLK3-G/K20**



**9491460587 Extraction Scale Electrical Pannel**

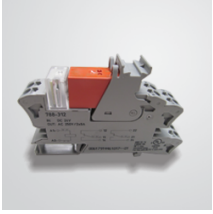

**9491460887 Relay 24V DC 2\*8A 788-312**



**9491465987 Fuse 1\*4A S 201 C4**



**9491466187 Tag Bypass/Auto**



**9491587 Wedge A Type 6\*6\*32**



**94937387 Pneumatic Cylinder FES-1376661 DSBC-40-125 PPVA-N3**



# Flow Balancer



 
**941234187 Load Cell 20 kg SSP Equal 2 Meter With Cable**



**941235787 Load Cell 10 kg SSP Equal 2 Meter With Cable**



**941238487 Silencer 1/4**

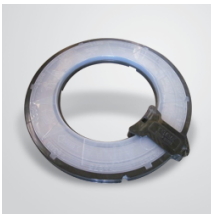

**941243087 Clamp 30 Meter**



**941243187 Clipse**



**941278887 Fitting Push-in QS-1/8-6**



**94206487 Self-adhesive Sponge Profile (Wick) 25\*3 mm EPDM**



**94226187 Self-adhesive Sponge Profile (Wick) 10\*02 mm EPDM**



**944451887 Rubber Coupling Ø219\*95**



**945801087 Single Coil Solenoid Valve FES-575249**



 
**945802087 Solenoid Coil VACS-C-C1-1 24 Volt FES-8025330**



**945802187 Plug Socket MSSD-EB-M12 FES-539712**



**9461187 Power Supply 2.5A 24V DC S8VK-C06024**

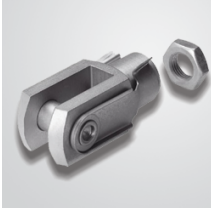

**9477087 Rod Clevis SG-M16X1,5 FES-6146**



**9479087 Fes-525747 Hose Ø6\*1 Festo**



**9479887 Fitting Push-in QS-1/8-8**



**9491195287 Load Cell inlet Module Fbs-1Lc**



**9491229887 Plc Unite Fbs-20Mat2 -Ac**



**9491287 Wedge A Type 6\*6\*36**



**9491405387 Control Panel X2 Base 5-F2 Beijer**



**9491460887 Relay 24V DC 2\*8A 788-312**



**9491461287 Extraction Scale Electrical Pannel**



**9491465987 Fuse 1\*4A S 201 C4**

# Automatic Dampening Machine



**941210687 Catch Lever 1000-U570**



**94123987 Silencer 1/8**



**941278887 Fitting Push-in QS-1/8-6**



**94189687 Rubber Coupling Ø150\*100**



 
**94286887 Load Cell 10 kg GS-2S**



**9430147487 Connection Ring Q150 (Normal Sheet)**



**945801087 Single Coil Solenoid Valve FES-575249**

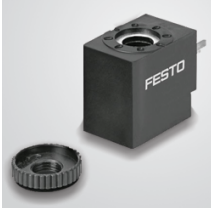

**945802087 Solenoid Coil VACS-C-C1-1 24 Volt FES-8025330**



**945802187 Plug Socket MSSD-EB-M12 FES-539712**



**9461187 Power Supply 2.5A 24V DC S8VK-C06024**



**9479887 Fitting Push-in QS-1/8-8**



**9491195287 Load Cell inlet Module Fbs-1Lc Fatek**



**9491405387 Control Panel X2 Base 5-F2 Beijer**



**9491460587 Electrical Pannel**



**9491460687 Plc Unite FBS-20MCT2-AC**



**9491460887 Relay 24V DC 2\*8A 788-312**



**9491460987 Sensor NPN PK20-S30L-NAS**



**9491465987 Fuse 1\*4A S 201 C4**



**9491467587 Sensor Cable DOL-1204-G05M FEM.ST 5M0 M1**



**По вопросам продаж и поддержки обращайтесь:**

|                             |                                 |                                |                          |
|-----------------------------|---------------------------------|--------------------------------|--------------------------|
| Алматы (7273)495-231        | Калининград (4012)72-03-81      | Омск (3812)21-46-40            | Сыктывкар (8212)25-95-17 |
| Ангарск (3955)60-70-56      | Калуга (4842)92-23-67           | Орел (4862)44-53-42            | Тамбов (4752)50-40-97    |
| Архангельск (8182)63-90-72  | Кемерово (3842)65-04-62         | Оренбург (3532)37-68-04        | Тверь (4822)63-31-35     |
| Астрахань (8512)99-46-04    | Киров (8332)68-02-04            | Пенза (8412)22-31-16           | Тольятти (8482)63-91-07  |
| Барнаул (3852)73-04-60      | Коломна (4966)23-41-49          | Петрозаводск (8142)55-98-37    | Томск (3822)98-41-53     |
| Белгород (4722)40-23-64     | Кострома (4942)77-07-48         | Псков (8112)59-10-37           | Тула (4872)33-79-87      |
| Благовещенск (4162)22-76-07 | Краснодар (861)203-40-90        | Пермь (342)205-81-47           | Тюмень (3452)66-21-18    |
| Брянск (4832)59-03-52       | Красноярск (391)204-63-61       | Ростов-на-Дону (863)308-18-15  | Ульяновск (8422)24-23-59 |
| Владивосток (423)249-28-31  | Курск (4712)77-13-04            | Рязань (4912)46-61-64          | Улан-Удэ (3012)59-97-51  |
| Владикавказ (8672)28-90-48  | Курган (3522)50-90-47           | Самара (846)206-03-16          | Уфа (347)229-48-12       |
| Владимир (4922)49-43-18     | Липецк (4742)52-20-81           | Саранск (8342)22-96-24         | Хабаровск (4212)92-98-04 |
| Волгоград (844)278-03-48    | Магнитогорск (3519)55-03-13     | Санкт-Петербург (812)309-46-40 | Чебоксары (8352)28-53-07 |
| Вологда (8172)26-41-59      | Москва (495)268-04-70           | Саратов (845)249-38-78         | Челябинск (351)202-03-61 |
| Воронеж (473)204-51-73      | Мурманск (8152)59-64-93         | Севастополь (8692)22-31-93     | Череповец (8202)49-02-64 |
| Екатеринбург (343)384-55-89 | Набережные Челны (8552)20-53-41 | Симферополь (3652)67-13-56     | Чита (3022)38-34-83      |
| Иваново (4932)77-34-06      | Нижний Новгород (831)429-08-12  | Смоленск (4812)29-41-54        | Якутск (4112)23-90-97    |
| Ижевск (3412)26-03-58       | Новокузнецк (3843)20-46-81      | Сочи (862)225-72-31            | Ярославль (4852)69-52-93 |
| Иркутск (395)279-98-46      | Ноябрьск (3496)41-32-12         | Ставрополь (8652)20-65-13      |                          |
| Казань (843)206-01-48       | Новосибирск (383)227-86-73      | Сургут (3462)77-98-35          |                          |
| Россия +7(495)268-04-70     | Киргизия +996(312)-96-26-47     | Казахстан +7(7172)727-132      |                          |